
 







 
 
 


 

 






**The Quick Start Guide is intended for the user of the system. Please remove this detachable sheet and hand it to the user.**

### Arming and Disarming the System

Step	Operation	User Actions	Key & Keypad Response
Optional	1	Press the Partition Selection button and then select a PARTITION (if Partition is enabled)  # followed by any combination of 	The selected key blinks.
	Optional	2	Arm AWAY  +  or enter code
Arm HOME  +  or enter code			
Disarm (OFF)  +  or enter code			
Quick arm AWAY (If Quick Arm is enabled) 			
Quick arm HOME (If Quick Arm is enabled) 			
Forced arming AWAY (system not ready)  +  or enter code  to silence the "protest" buzzer			
Forced arming HOME (system not ready)  +  or enter code  to silence the "protest" buzzer			
Optional	3	INSTANT (After arming HOME/AWAY)  0	
	LATCHKEY 		

**Note:** The factory default master user code is 1111. The code is not required if quick arming has been permitted by the installer. Change the factory default code to a secret code without delay (refer to the KP-250 PG2 User's Guide, Chapter 6, section B.4).

### Initiating Alarms

Alarms	Actions	Notes
Emergency alarm	 (≈ 2 sec.)	When pressing the Fire or Emergency icons, the KP-250 PG2 starts beeping. After pressing the button for approx. 2 seconds, the KP-250 PG2 sends the command.
Fire alarm	 (≈ 2 sec.)	
Panic alarm	 (≈ 2 sec.)	